


Children's Picnic Table ASSEMBLY MANUAL

Copyright © 2015 Gorilla Playsets All Rights Reserved

Gorilla Playsets • 190 Etowah Industrial Court • Canton, GA 30114 • (800) 882-0272

Latest Revision: April 20, 2015

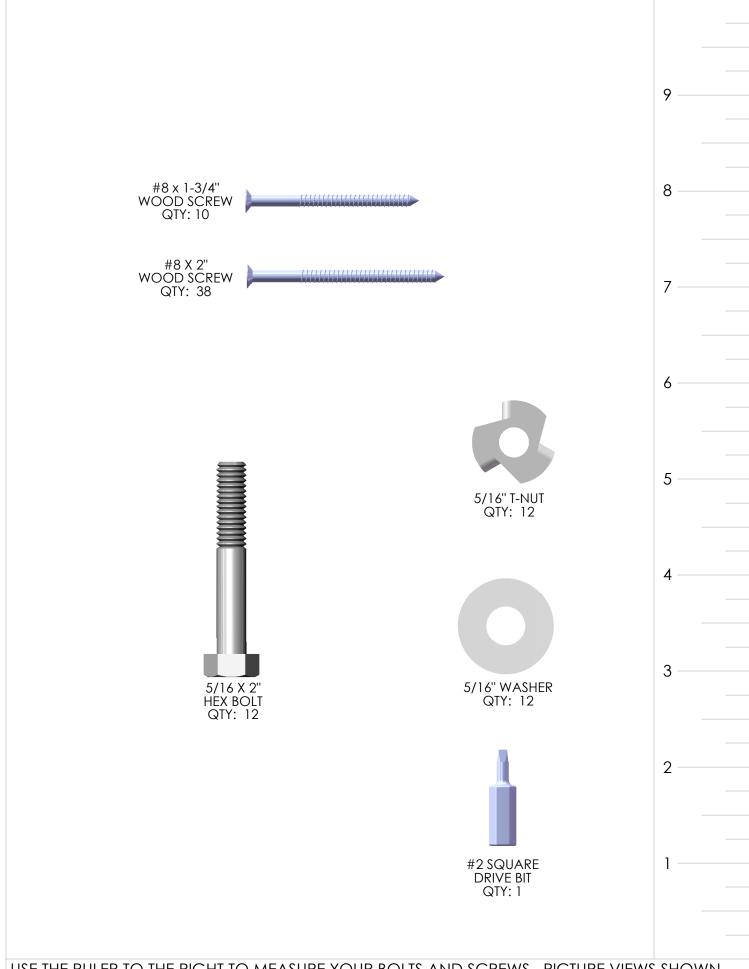


USE THE RULER TO THE RIGHT TO MEASURE YOUR BOLTS AND SCREWS. PICTURE VIEWS SHOWN ABOVE ARE 1:1 SCALE AND CAN BE USED TO MATCH BOLT AND SCREW SIZES.

PICTURE	DESCRIPTION	QTY.
	2 X 4 X 23-13/16" TABLE LEG	4
	2 X 4 X 21" TABLE STRINGER	1
	2 X 4 X 21-1/2" ANGLE SUPPORT	2
	2 X 4 X 21-3/8" TOP LEG SUPPORT	2
	2 X 4 X 42" CENTER LEG SUPPORT	1
	2 X 4 X 42" SEAT SUPPORT	2

PICTURE	DESCRIPTION	QTY.
	2 X 6 X 47-5/8" TABLE SEAT	2
	5/4 X 5 X 47-5/8'"' CENTER TABLE TOP	1
	5/4 X 5 X 47-5/8" TABLE TOP	4
	UMBRELLA ASSEMBLY	1


STEP 1: LEG ASSEMBLY

- 1: FIND TWO 2 X 4 X 23-13/16" TABLE LEGS. NOTE THE HOLE PATTERN ON THE LEGS AND POSITION THEM SO THAT THE END WITH ONE HOLE WILL BE AT THE TOP. THE ORIENTATION OF THE LEGS SHOULD LOOK LIKE THE SIDES OF THE LETTER "A".
- 2: DETERMINE WHICH SIDE WILL BE FACING THE INSIDE OF THE TABLE AND PLACE A T-NUT IN EACH OF THE HOLES. SET THE T-NUTS WITH A HAMMER UNTIL THEY ARE FLUSH/ALMOST FLUSH WITH THE FACE OF THE BOARD.
- 3: FIND A 2 X 4 X 21-3/8" TOP LEG SUPPORT BOARD AND LINE UP THE HOLES WITH THE HOLES AT THE TOP OF THE TABLE LEGS AND FASTEN WITH 5/16 X 2" HEX BOLTS AND 5/16" WASHERS.
- 4: FIND A 2 X 4 X 42" SEAT SUPPORT AND LINE UP THE HOLES IN THE SEAT SUPPORT WITH THE HOLES IN THE TABLE LEGS. FASTEN THE SEAT SUPPORT TO THE TABLE LEGS WITH 5/16 X 2" HEX BOLTS AND 5/16" WASHERS.
- 5: REPEAT THIS PROCESS TO CREATE ANOTHER SET OF LEGS FOR THE OTHER SIDE OF THE TABLE.

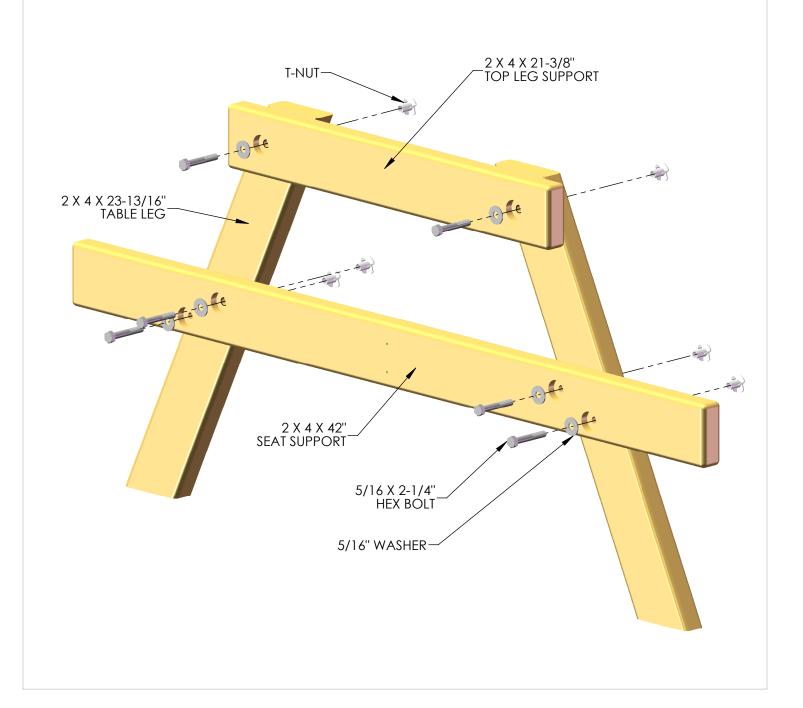


STEP 2: CENTER LEG SUPPORT

- 1: FIND THE 2 X 4 X 42" CENTER LEG SUPPORT. TAKE NOTE OF THE TWO HOLES DRILLED IN EACH END OF THE BOARD. ALSO THE ROUNDED OVER EDGE ON THE LARGE HOLE AT THE CENTER OF THE BOARD SHOULD FACE UP.
- 2: CENTER THE LEG SUPPORT UNDERNEATH THE SEAT SUPPORTS OF THE LEG ASSEMBLIES CREATED IN THE PREVIOUS STEP. EACH END OF THE BOARD SHOULD BE FLUSH WITH THE OUTSIDE SURFACE OF THE 2 X 4 X 42" SEAT SUPPORT. ATTACH THE LEG SUPPORT TO THE SEAT SUPPORTS WITH 2" WOOD SCREWS IN THE PRE-DRILLED HOLES.

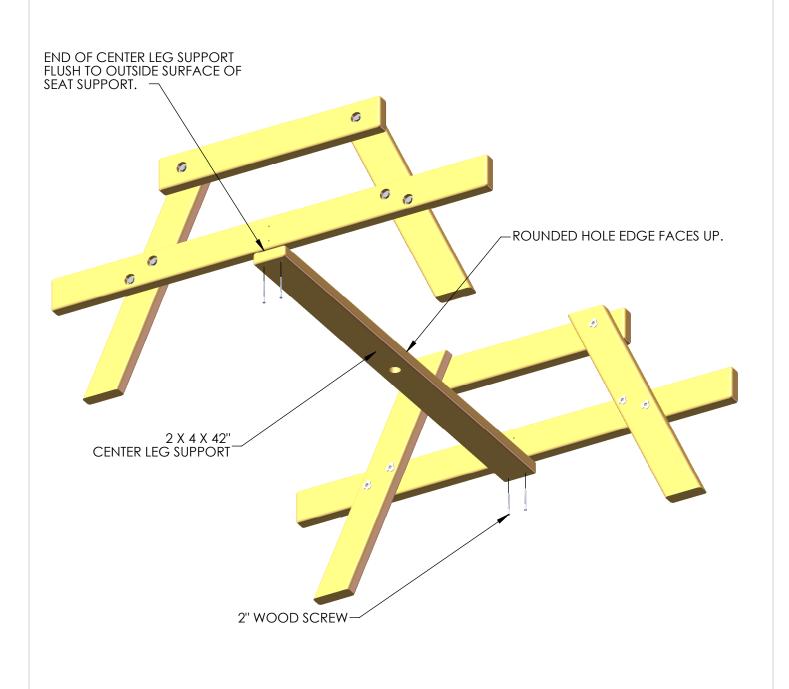

STEP 3: TABLE TOP

- 1: FIND ONE 5/4 X 5 X 47-5/8" CENTER TABLE TOP BOARD AND FOUR 5/4 X 5 X 47-5/8" TABLE TOP BOARDS. THE CENTER BOARD WILL HAVE A HOLE DRILLED ON-CENTER IN THE MIDDLE OF THE BOARD, AND ALL OF THE BOARDS WILL HAVE PRE-DRILLED HOLES IN EACH END.
- 2: CENTER THE HOLES IN THE CENTER TABLE TOP BOARD OVER THE CENTER OF THE TOP LEG SUPPORTS AND ATTACH WITH 2" WOOD SCREWS IN THE PRE-DRILLED HOLES. MAKE SURE THE HOLE AT THE CENTER OF THE BOARD HAS THE ROUNDED OVER EDGE FACING UP.
- 3: PLACE THE FOUR TABLE TOP BOARDS ON TOP OF THE TOP LEG SUPPORTS. SPACE THEM EVENLY SO THAT THE BOARDS AT THE END OF THE TABLE TOP ARE FLUSH TO THE ENDS OF THE TOP LEG SUPPORT. ATTACH EACH BOARD WITH 2" WOOD SCREWS IN THE PRE-DRILLED HOLES.

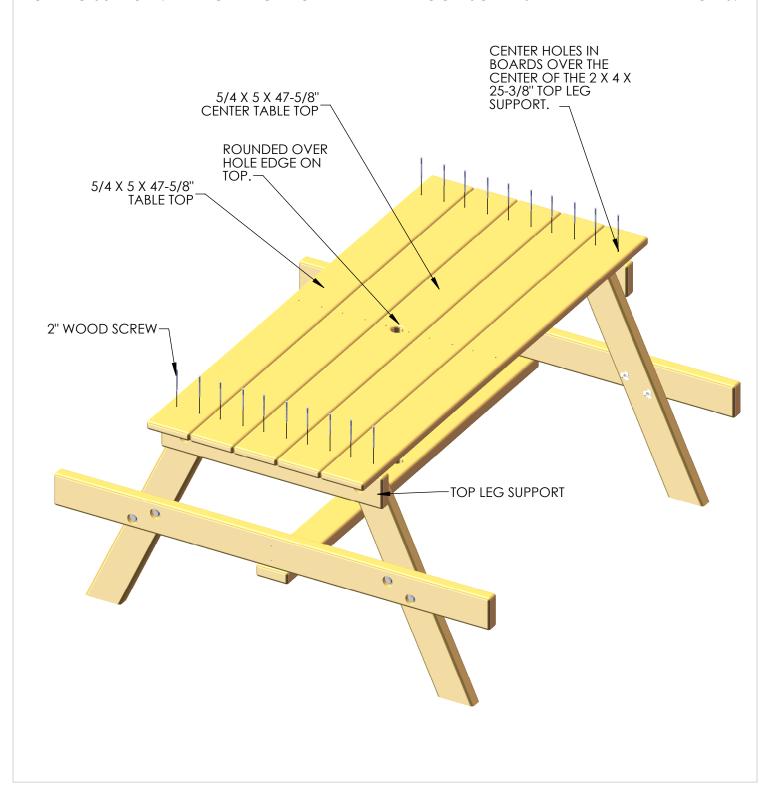


STEP 4: TABLE STRINGER

- 1: FIND THE 2 X 4 X 21" TABLE STRINGER. NOTE THE ANGLED ENDS OF THE BOARD, AND THE HOLE IN THE CENTER.
- 2: POSITION THE TABLE STRINGER SO THAT THE HOLE IN THE CENTER OF THE BOARD LINES UP WITH THE HOLE IN THE CENTER OF THE PICNIC TABLE, AND THE ANGLED ENDS ARE FACING DOWN.
- 3: FROM THE TOP OF THE TABLE ATTACH THE TABLE STRINGER WITH TWO 1-3/4" WOOD SCREWS PER BOARD.



STEP 5: ANGLE SUPPORTS

- 1: FIND TWO 2 X 4 X 21-1/2" ANGLE SUPPORTS. NOTE THE ANGLED ENDS OF THE BOARDS.
- 2: POSITION THE ANGLE SUPPORTS SO THAT THE LONG ANGLED END OF THE BOARD IS RESTING AGAINST THE BOTTOM OF THE TABLE TOP. THE BOTTOM END WILL REST UPON ON THE CENTER LEG SUPPORT AND WILL BE FLUSH TO THE SEAT SUPPORT. CENTER THE BOTTOM END ON THE TWO PREDRILLED HOLES IN THE SEAT SUPPORT.
- 3: USE 2" WOOD SCREWS IN THE PRE-DRILLED HOLES ON THE LONG ANGLED END OF THE ANGLE SUPPORT AND IN THE PRE-DRILLED HOLES IN THE SEAT SUPPORT.

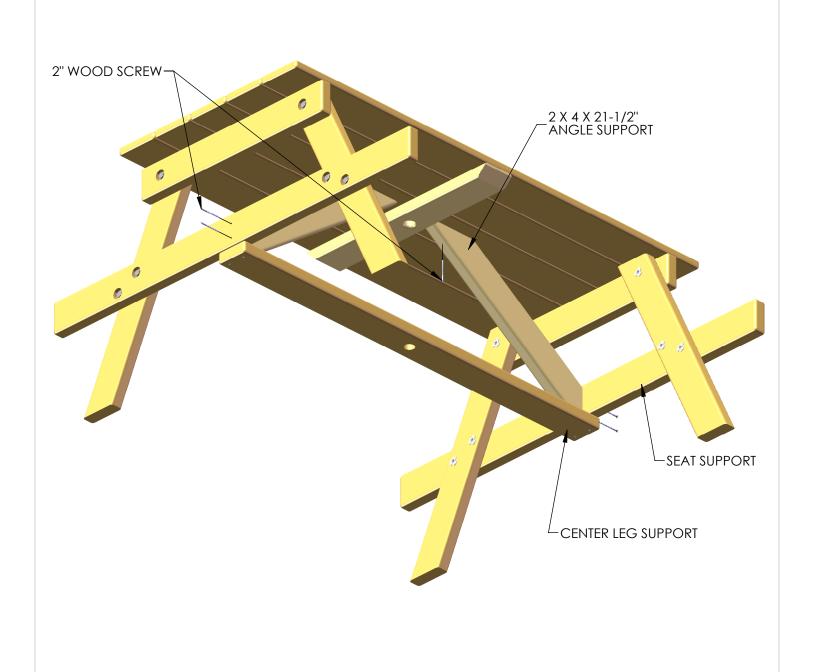

STEP 6: SEATS

- 1: FIND THE 2 X 6 X 47-5/8" TABLE SEATS. NOTE THE PRE-DRILLED HOLES ON EACH END.
- 2: CENTER THE SEATS AT THE ENDS OF THE SEAT SUPPORTS AND ATTACH WITH 2" WOOD SCREWS IN THE PRE-DRILLED HOLES.




STEP 7: UMBRELLA

- 1: PLACE THE LOWER SECTION OF THE UMBRELLA WITH THE POINTED END THROUGH THE HOLE IN THE PICNIC TABLE. PLACE A BLOCK OF WOOD ON TOP OF THE LOWER SECTION AND HAMMER IT INTO THE GROUND 3 TO 4 INCHES.
- 2: RELEASE THE CATCH ON THE LOWER UMBRELLA SECTION. NOW PLACE THE UPPER UMBELLA SECTION MAST INTO THE TOP OF THE LOWER UMBRELLA SECTION. ADJUST THE UPPER UMBRELLA SECTION MAST UP AS HIGH AS POSSIBLE. THEN PUSH THE CATCH IN THE LOWER UMBRELLA SECTION TO SECURE IT.

BEFORE ANY STORMS OR HIGH WIND CONDTIONS REMOVE UMBRELLA FROM LOWER SECTION AND STOW IN GARAGE. IF NO GARAGE IS AVAILABLE THEN COLLAPSE THE UMBRELLA AND USE A RUBBER BAND OVER THE TOP NEAR THE PLASTIC TIPS SO IT DOES NOT BLOW OPEN

!!WARNING!!

IF ANY PLASTIC TIPS OF THE UMBRELLA BECOME BROKEN, CRACKED OR MISSING IMMEDIATELY DISCONTINUE USE. REPLACEMENT UMBRELLAS ARE AVAILABLE SHOULD YOU NEED ONE.

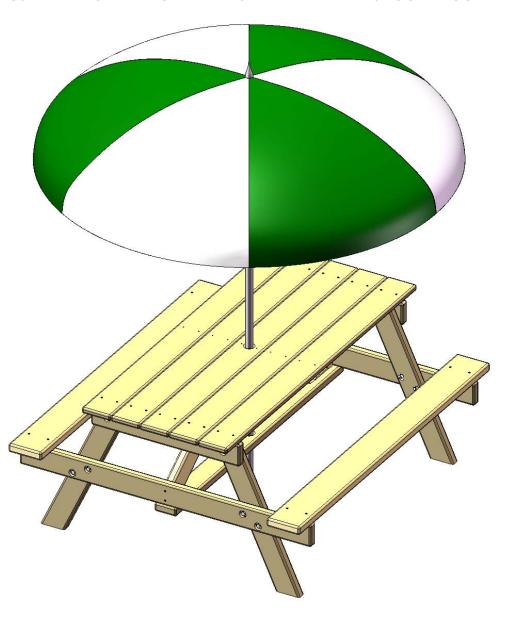

WARRANTY REGISTRATION CARD - PICNIC TABLE

Go to **www.gorillaplaysets.com/category-s/112.htm** to fill out our online registration and save a stamp! If you do not have internet access, fill out this form and return it to us to complete your registration.

Name:
Address:
City, State, Zip:
Email:
Date of Purchase:
Place of Purchase:
City, State, Zip:
Please, check the boxes below. Your age? □ 18-25 □ 26-30 □ 31-35 □ 36-40 □ 41-45 □ 46-50 □ 51-55 □ 56-60 □ 61-65 □ 66+
How old are your children? □ 2-3 □ 4-5 □ 6-7 □ 8+
How would you rate the quality of our product? □ Excellent □ Above average □ Average □ Below average □ Poor
Would you recommend this product? □ Yes □ No
Comments:

Thank you for registering with Gorilla Playsets™! The information you provided will be kept confidential and will ONLY be used to better serve our customers. Remove this page from the manual and mail to the address below. Thank you from everyone here at Gorilla Playsets™!

Mail to:

Gorilla Playsets 190 Etowah Industrial Court Canton, GA 30114 or fax: (678) 880-3329

